



i885w

**Car Camcorder
User Manual**

目录

Regulatory Notices	3
Prohibition of Co-location.....	3
WEEE Notice.....	3
CE Regulatory Notice	3
Notes on Installation	4
Caution	4
1 Introduction	7
1.1 Features.....	7
1.2 Package Contents	7
1.3 Product Overview	8
2 Getting Start	10
2.1 Insert the Memory Card	10
2.2 Install in Vehicles	11
2.3 Connecting to Power.....	13
2.4 Powering the Camcorder On / Off and Reset	14
2.4.1 Auto Power On/Off.....	14
2.4.2 Manual Power On/Off	14
2.4.3 Reset the camcorder.....	14
2.5 Initial Settings	15
2.5.1 Set the Date and Time	15
3 Using the Camcorder	16
3.1 Recording Videos	16
3.1.1 Auto Recording	16
3.1.2 Recording Screen.....	16
3.1.3 Emergency Recording.....	18
3.2 GPS (Option).....	19
3.3 Interior Camera (Option)	19
3.4 Rear Camera (Option)	20

3.5 File Playback	21
3.6 Parking Mode	21
3.7 HUD	21
3.8 Add Speed Cam Point	21
3.9 Speed Limit Alert	21
4 Setting Go Moto Plus App.....	22
4.1 Download app	24
4.2 Wi-Fi connection	25
4.3 Use Go Moto Plus app.....	26
4.3.1 Main Screen	27
4.3.2 Playback, delete, download	29
4.3.3 Camera Setting	31
4.4 Album	32
5 Adjust the Settings	35
6 Specifications.....	37

About this Guide

The content in this document is for information purpose and is subject to change without prior notice. We made every effort to ensure that this User Guide is accurate and complete.

However, no liability is assumed for any errors and omissions that may have occurred.

The manufacturer reserves the right to change the technical specifications and accessories without prior notice.

Regulatory Notices

This document provides country- and region-specific non-wireless and wireless regulatory notices and compliance information for your product. Some of these notices may not apply to your product.

Prohibition of Co-location

This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

WEEE Notice

Disposal of Waste Electrical and Electronic Equipment and/or Battery by users in private households in the European Union



WEEE



Battery

This symbol on the product or on the packaging indicates that this cannot be disposed of as a household waste. You must dispose of your waste equipment and/or battery by handling it over to the applicable take-back scheme for the recycling of electrical and electronic equipment and/or battery. For more information about recycling of this equipment and/or battery, please contact your city office, the shop where you purchased the equipment or your household waste disposal service. The recycling of materials will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.

CE Regulatory Notice

The product herewith complies with the requirements of CB IEC 62368-1:2018, Radio Equipment Directive 2014/53/EU Article 3.2 and the RoHS Directive 2011/65/EU.

- ❖ EU Health Protection: This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

- ❖ Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- ❖ Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

Notes on Installation

1. Do NOT setup the camcorder while driving or while the vehicle is in motion. Please stop at a safe place before adjusting or installing.
2. Install the camcorder above the rear-view mirror to obtain the best open-field view. Do NOT install the camcorder in a location that will obstruct your required driving view.
3. Make sure that the lens is within the wiping range of the windscreen wiper to ensure a clear view even when it rains.
4. Do not touch the lens with your fingers. Finger grease may be left on the lens and will result in unclear videos or snapshots. Clean the lens on a regular basis.
5. Use the products of the attached power charger only, please do not use other brand power charger, in order to avoid equipment burn.
6. The quick-release bracket uses 3M adhesive. After installing the quick-release bracket, please let it sit for **12 hours** before installing the camcorder.
7. **The included electrostatic film is designed for easy removal and replacement of the quick-release bracket and is not required for installation. Before applying the electrostatic film, ensure that the mirror surface is clean. During installation, press out any air bubbles between the electrostatic film and the mirror. If there is oil, dust, or air bubbles between the mirror and the electrostatic film, the film may not adhere properly, which could lead to its detachment along with the camcorder. HP and our authorized resellers are not responsible for any loss or data loss caused by improper installation or the failure of the electrostatic film to maintain adhesion.**

Caution

- ❖ Never disassemble or attempt repair of this product. Doing so may damage the camcorder, cause electric shock and void your product warranty.
- ❖ Due to local laws and vehicles safety considerations, do not manually operate the camcorder while driving.

- ❖ Set up time and date accurately before you use this camcorder.
- ❖ The firmware function in the camcorder is for reference only, drivers are advised to exercise discretion based on actual road conditions.
- ❖ The results of GPS positioning are only for reference, and should not affect the actual driving situation. The camcorder also cannot ensure the positioning accuracy.
- ❖ GPS positioning accuracy may differ depending on weather and location such as high buildings, tunnels, undergrounds, or forests. GPS satellite signals cannot pass through solid materials (except glass). Tinted window will also affect the performance of the GPS satellite reception.
- ❖ GPS reception performance on each camcorder may differ. The camcorder cannot determine the accuracy of the positioning results from different hardware.
- ❖ The values displayed in this system, such as speed, position, and the distance warning to the speed camera set points, may be inaccurate due to the influence of surrounding environment. They are for your reference only.
- ❖ This product is used only for non-commercial use, within the maximum limits permitted by applicable law. We do not take any responsibilities for the loss of use of the product.
- ❖ This camcorder gets warm when in use; this is normal.
- ❖ Improper use or operation of the product may result in damage of the product or its accessories and void the warranty.
- ❖ Wi-Fi Signals are unable to pass through the building. The max limit of signal transmission is 5m.
- ❖ Wi-Fi Operation Channel: Ch1~Ch11
- ❖ The product employs wireless data communication which may interfere, or be interfered by, a near-by camcorder.
- ❖ Never use this camcorder in the vicinity of a microwave oven or at places where there is radio interference.
- ❖ Radio wave reception may be worsened in specific environments.
- ❖ Please be advised that if another camcorder is also using the same 2.4GHz band as this product, the processing speed of both camcorders may slow down.
- ❖ This product gets warm when in use; this is normal.
- ❖ Improper use or operation of the product may result in damage of the product or its accessories and void the warranty.

- ❖ The radio frequency (RF) generated by this RF electronic camcorder may cause adverse effects on the operation of other electronic camcorders and result in malfunctioning. Wireless transmitters and circuitry may also interfere with other electronic camcorders. Therefore, do observe the following precautions:
 - Aircraft: Never use a radio transmitter when you are in an airplane. Please switch off the Wi-Fi function of the camcorder.
 - Vehicle: The radio frequency transmitted by this camcorder may affect the electronic system in a motorized vehicle. Please consult the manufacturer or dealer of your vehicle on the possible effect.
 - Pacemaker: In order to prevent any potential interference to a pacemaker, anyone who uses a pacemaker should be advised, that, when using this camcorder, a minimum distance of 15cm (6 inch) should be kept between the camcorder and the pacemaker; and never put this camcorder in a chest pocket. In case of any doubt of interference, switch off the camcorder immediately.
 - Medical Camcorder: If you use a personal medical camcorder, consult the camcorder manufacturer or your physician to confirm if your camcorder is sufficiently shielded from the RF transmission of this camcorder.
 - Medical Facilities: Hospitals and medical institutes may use facilities that are sensitive to an external RF energy. Observe such instructions when the medical care personnel or any posted sign requests you to switch off any camcorder that may interfere the radio frequency.
 - Explosion sites or any location with a posted sign: In order to prevent interfering with an explosion activity, observe all the signage and instructions in the Explosion Area or in a zone with a “Switch Off 2-way Radios” sign by switching off camcorders that may interfere with the radio frequency.
- ❖ HP Inc. is NOT responsible for the loss of any data/content during operation.

Before you start using the Car Camcorder, it is assumed that you agree to the above statements.

1 Introduction

Thank you for purchasing this advanced camcorder. This camcorder is specifically designed for real time video and audio recording when driving.

1.1 Features


- High Definition 2K (2560x1440)
- F/1.7 Big Aperture
- 11.26" Touch Screen
- Built-in 2.4GHz/5GHz Wi-Fi
- Super Capacitor
- Collision Detection and Emergency Recording
- Invisible installation
- Quick-release mount
Supports 1080p interior and rear cameras (option)

1.2 Package Contents

The package contains the following items. If there are any missing or damaged items, contact your dealer immediately.

Camcorder		Installation Card		
				
4-in-1 hub	Electrostatic Film	Quick-release Bracket		
				
Manual	Power Adapter	Rear Cam (Option)	External GPS (Option)	Interior Cam (Option)
				

1.3 Product Overview

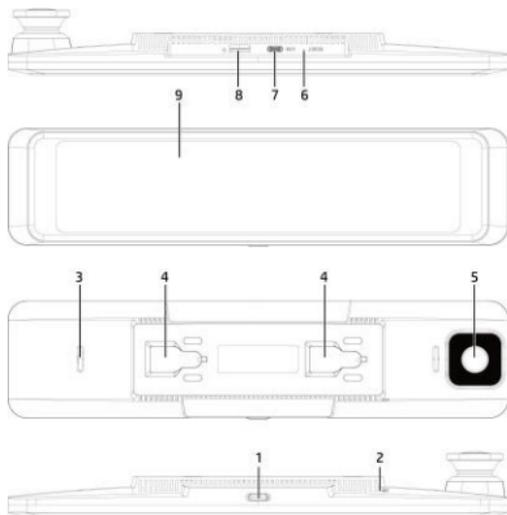

No.	Item
1	Button Short press: LCD on/off Press and hold 3 seconds: manually power off
2	Microphone
3	Speaker
4	Slot for quick-release mount
5	Camera lens
6	Reset
7	USB-C power
8	microSD card slot
9	Screen




No	Connector	Description
1		USB-C Connector Plug into USB-C port on the device
2		2.5mm port To connect with interior camera (option)
3		Mini USB connector To connect with power adapter
4		4pin port To connect with rear camera (option)
5		3.5mm port To connect with GPS (option)

2 Getting Start

2.1 Insert the Memory Card

Insert the memory card with the gold contacts facing the back of the camcorder. Push the memory card until it clicks into place. (Use class V30 or greater speed microSD cards for this camcorder; It is recommended to format the microSD cards before the initial use.)

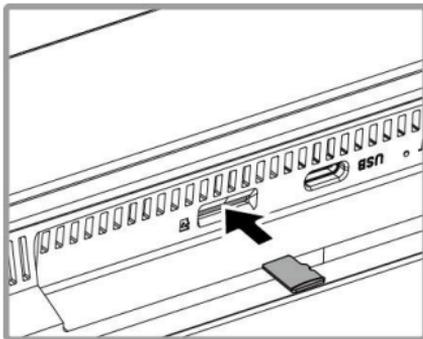

To remove the memory card


Push the edge of the memory card inward until you hear/feel it click, then allow it to push out until you can remove it from the slot.

Note:

1. Do not remove or insert the memory card when the camcorder is powered on. This may damage the memory card.
2. Use class V30 greater speed microSD cards and capacity higher than 16GB for this camcorder. Supports up to 128GB.
3. It is recommended to format the microSD cards before the initial use.
4. Please periodically format the memory card (suggest once per month).
5. Use memory card higher than 64GB, please use the camcorder to format the memory card before initial use.
6. Memory card has certain usage life. Long use may lower down write-in speed and failure saving. In this case, we recommend you to purchase new memory card.

2.2 Install in Vehicles

1. Clean the original rearview mirror before installation.
2. Temporarily attach **the installation card** to the original rearview mirror, ensuring it is centered vertically, with the alignment line on **the installation card** matching the left edge of the original mirror.

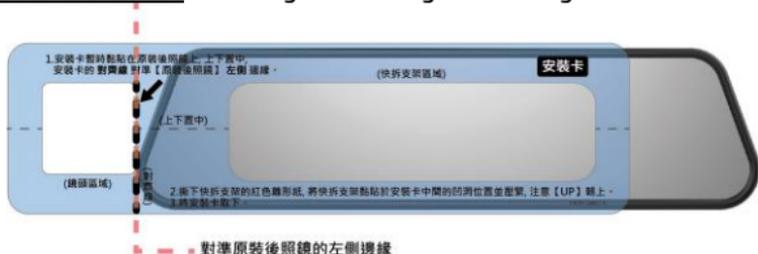

3. Remove the red release paper from **the quick-release bracket**.



4. Attach the bracket to the recessed area in the center of **the installation card** and press firmly, making sure the “UP” side is facing upwards.




5. Remove the installation card.



6. After letting it sit for 12 hours, attach the i885w to the quick-release bracket. Push it fully from left to right until you hear a clicking sound.




7. Completed.

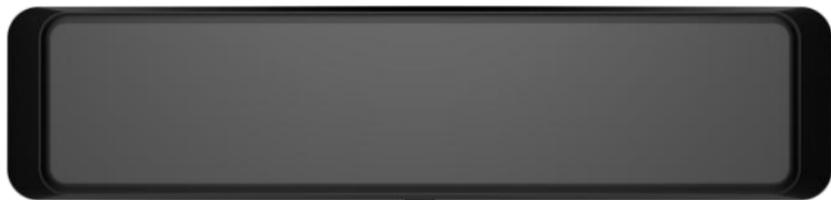

2.3 Connecting to Power

Use only the supplied car adapter to power up the camcorder.

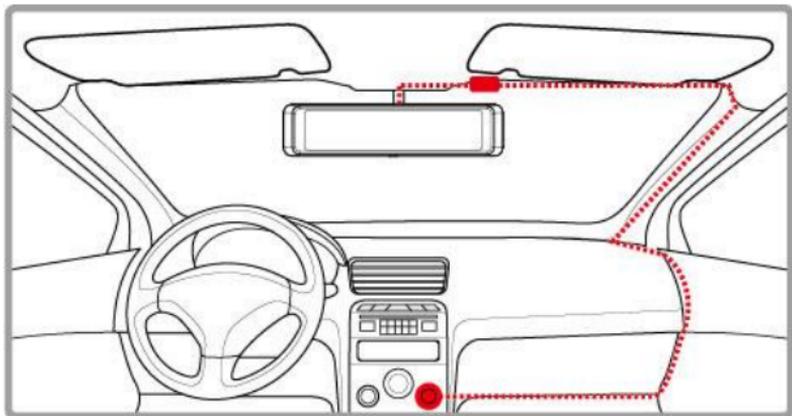

1. Connect one end of the power adapter to USB port of the 4-in-1 hub. USB port input: DC 5V / 2.5A.
2. Plug the other end of the car adapter to the cigarette lighter socket of your vehicle. Once the vehicle engine is started, the camcorder automatically powers on. Car power adapter input: DC 12 / 24V.

Note:

Use only the supplied car power adapter. DO NOT use the other brand of power adapters; otherwise, it may cause the product mal-function.

2.4 Powering the Camcorder On / Off and Reset

2.4.1 Auto Power On/Off

Once the vehicle engine is started, wait a few seconds to charge the camcorder, and then the screen will light up and camcorder automatically powers on, and start recording.


Once the vehicle engine shuts down, the camcorder automatically saves the recording and turns off the power.

Note:

1. Automatic power up and shut down assumes the power socket is linked to the car ignition.
2. The camcorder uses super capacitor as power source. Please wait a few seconds to charge the super capacitor, and then the camcorder will automatically power on and start recording.


2.4.2 Manual Power On/Off

To manually turn on or turn off the power, press  **POWER** button for 3 seconds.

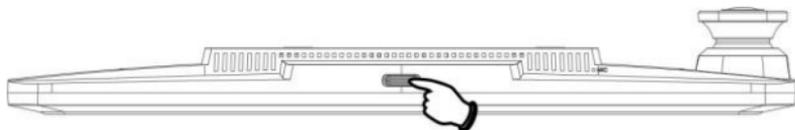

2.4.3 Reset the camcorder

 Use needle to pin the reset hole.



2.5 Initial Settings

2.5.1 Set the Date and Time

We recommend you to set up date and time before initial use.

To set the correct date and time, do the following:

1. In the recording screen, tap anywhere on screen to wake up function bar.



2. Tap icon  to enter Menu.
3. Slide the sub-menu up and down to select [date/time].
4. Tap [+][-] to change the number, and then tap [OK] to confirm setting.
5. Tap icon  to return to recording screen.

3 Using the Camcorder

3.1 Recording Videos

3.1.1 Auto Recording


When the vehicle engine starts up, wait a few seconds to charge the camcorder, then it will automatically turn on and start recording. Recording will automatically stop when the engine is switched off.



Note:

1. On some cars, the recording will continue when the engine is switched off. If this happens, please manually turn off the cigarette lighter or remove the car adapter from the cigarette lighter.
2. It can be configured to save a video file for every 1 minute, 2 minutes or 3 minutes of recording.
3. The camcorder saves the recording in the memory card. If the memory card capacity is full, the oldest file in the memory card will be overwritten.
4. The camcorder uses super capacitor as power source. Please wait a few seconds to charge the super capacitor, and then the camcorder will automatically power on and start recording.

3.1.2 Recording Screen

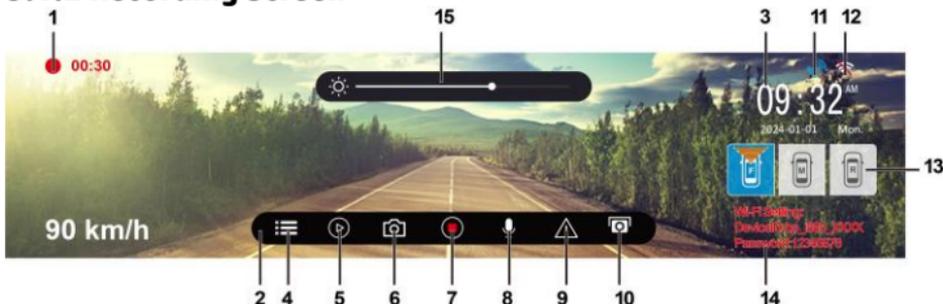

No	icon	Item	Description
1		Recording Duration	Indicates the video current duration.
2		Function Bar	Menu settings or other function icons.
3		Date / Time	Indicates the current recording date and time.
4		Menu	Menu set up.
5		Playback	File playback.
6		Photo	Take snapshot
7		Start/Stop Record	Start/stop video recording.
8		Voice Record	Turn on/off voice recording.
9		Emergency Recording	During video recording, touch this icon to start emergency recording and lock the file.
10		Add speed cam point	Add speed cam point
11		GPS Status	If install optional GPS, when GPS is positioned, the icon will turn from  to blue  .
12		Wi-Fi	 Wi-Fi on  Wi-Fi off
13		Preview	F: front camera M: Interior camera R: Rear camera
14	Wi-Fi Setting: DeviceID:hp_i885w_XXXX Password:12345678	Wi-Fi information	Wi-Fi ID and password
15		Screen Brightness	To adjust screen brightness

3.1.3 Emergency Recording

This Car Camcorder is equipped with a G-Force sensor. If the G-sensor function is enabled, when collision is detected, the camcorder will automatically trigger the Emergency Recording feature. The “Emergency” string will pop up on left top screen corner. The emergency recording files will not be overwritten by the normal loop recording files.

To manually initiate the emergency recording feature, tap icon  during the normal recording function.

The file length of emergency is as same as interval time of normal loop recording. Once it reaches setting time, the camcorder will resume to normal loop recording.



Note:

1. The sensitivity of G-sensor can be adjusted in the Menu. Enter Menu and select [Collision Detection] to adjust Off, Low sensitivity, Middle sensitivity, High sensitivity. If choose Off, the camcorder will not activate auto emergency recording.
2. The emergency file is created as a new file and saved in Emergency folder, which will be protected to avoid being overwritten by normal loop recording.
3. The Emergency folder will occupy 20% of available memory card capacity. When the space is full, it will overwrite the oldest emergency files.

3.2 GPS (Option)

Plug the optional GPS accessory into GPS port on the 4-in-1 hub, you can preview current car speed and direction such information.




Note:

1. GPS function is limited in certain areas. Please contact dealer for details.
2. When GPS is positioned, the icon will change from white to blue .


3.3 Interior Camera (Option)

Turn off the camcorder first. Plug the phone jack of interior cam into A/V hole of the 4-in-1 hub, and fix the camera on the front windshield window or the back side of seat pillow. When installation is done, power on the front camcorder, then you are ready to use in-car recording.

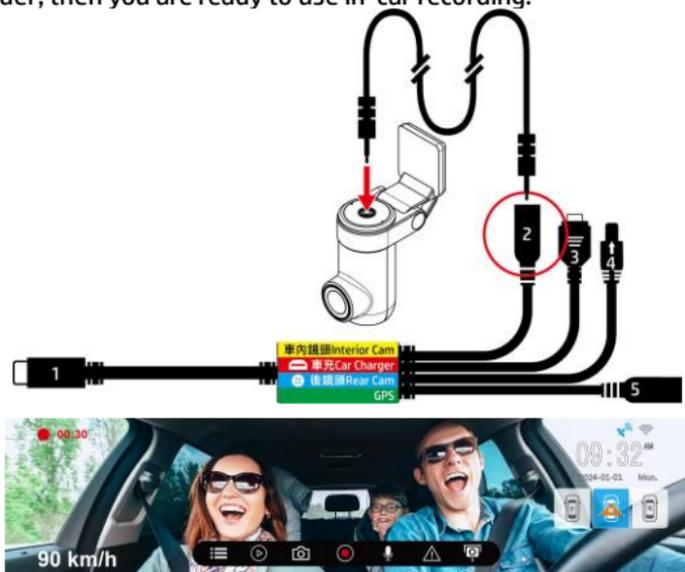

3.4 Rear Camera (Option)

Power off the camcorder first. Plug the connector of rear camera into the socket on the 4-in-1 hub, and hide and install the cable well. When installation is done, power on the front camera, then you are ready to use rear view recording.

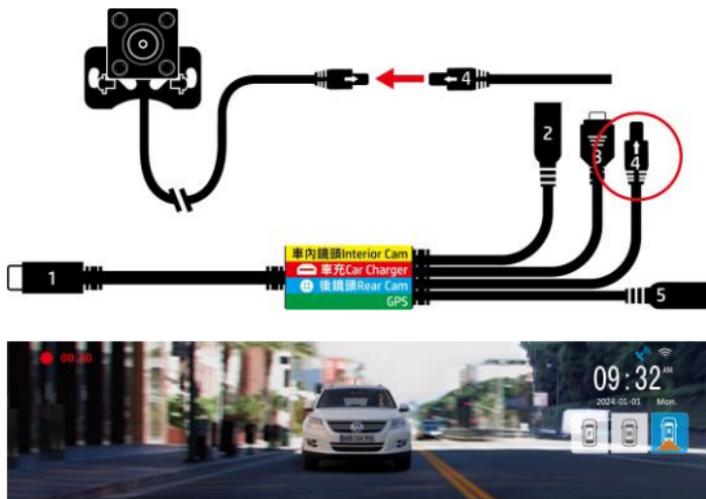


Note:

1. Interior camera and rear camera don't support hot plug-n-play. Please power off the main camcorder before plug into the camera.
2. Tap the F or M or R icon on screen to switch preview image for front or interior or rear camera.
3. The interior camera F10 is vertical ID design. Left and right can be rotated in 360 degrees. Up and down can be adjusted in 90 degrees.

3.5 File Playback and Deletion

In the recording screen, tap icon  to enter Playback. Slide the screen up and down to choose desired file to playback.

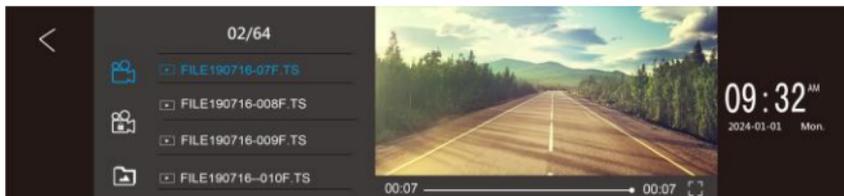

In the recording screen, tap icon  or  to playback/pause the file, tap  or  to review previous or next file, tap  to delete the file, tap  to back to last page.



Note:

Deleted files CANNOT be recovered. Ensure the files you wish to preserve are backup before deletion.

3.6 Parking Mode

To monitor the vehicle when it is parked, you can activate **Parking Mode**.

Before activate Parking Mode, please install ACC Cable through professional car shop.

Follow the steps below to activate Parking Mode,

1. In the recording screen, tap icon  to enter menu.

2. Slide the screen to choose **Parking Mode** option, tap it to enter and choose **Park Recording, Timelapse, or Collision Detection**.
3. Tap icon  to return to recording screen.
4. When car's engine is turned off, the camcorder will enter Parking Mode automatically. And when car's engine starts once again, the camcorder will stop Parking Mode and return to normal loop recording.
5. When collision is detected during parking mode, the camcorder will automatically trigger the emergency recording. The emergency recording will not be overwritten by the normal loop recording files.


Note:

1. ACC Cable is not included in the package. Please consult the dealer for purchase and seek for specific professional store for installation.
2. Files recorded in Parking Mode are saved in Video folder. When the event triggered, the files will be saved in Emergency folder.
3. Timelapse recording is recorded by one frame per second. A 30-min recording will be saved in a 1-min file.

3.7 HUD

The heads-up display (HUD) allows you to view the current speed and date/time. In HUD mode, recording is not affected, nor is the speed camera alert. The setup instructions are as follows:

1. On the recording screen, tap the menu icon  to enter the menu.
2. Swipe up or down to select [Screen Settings], tap to enter, and choose [HUD].
3. Tap the back icon  to return to the recording screen. The HUD mode will automatically activate after approximately 7 seconds.

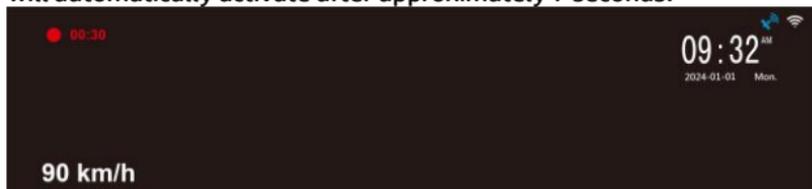

During this period, you can lightly touch the screen to return to the recording screen. In recording screen mode, if no operation is performed for 7 seconds, the system will automatically switch back to HUD mode.

3.8 Add Speed Cam Point

You can manually set speed camera locations on this device.

1. Once satellite positioning is complete, tap the icon  on the screen during recording to add a custom speed camera location.
2. The camcorder can store up to **50** custom speed camera locations. If the limit is exceeded, the screen will display "**Speed Position is full.**"

If the camcorder's custom speed camera locations are full, go to the "*Speed Position Management*" menu and select either "*Delete Last Position*" or "*Delete All Position.*" Note that once "*Delete All Position*" is executed, all previously set custom speed camera locations will be erased. Ensure that you want to reset your custom speed camera locations before proceeding.

3.9 Speed Limit Alert

If the **Speed Limit Alert** function is enabled, the camcorder produces audible alert and screen message once your car's location is determined by GPS and its running speed exceeds the set limit. The setup instructions are as follows:

1. On the recording screen, tap the menu icon  to enter the menu.
2. Swipe up or down to select [Speed Limit Alert], tap to enter, and set the speed limit for alerts [Off/50~200 km/h (30~125 mph)].
3. Tap the back icon  to return to the recording screen.
4. While driving, if the speed in the lower-left corner changes from white to red and a warning sound is heard, it indicates that the driving speed has exceeded the custom speed limit, reminding the driver to slow down.



4 Setting Go Moto Plus App

4.1 Download app

The camcorder allows you to connect to the smart phone via the app. When using for the first time, install the **[Go Moto Plus]** app for your smart phone.

1. Scan below QR code or download **Go Moto Plus** app from Google Play or App Store.
2. Install the app.



iOS/Android

APP layout and features may be changed subject to different software versions. Please refer to Google Play or APP Store for update.

4.2 Wi-Fi connection

1. In the recording screen, tap icon  to enter menu.
2. Swipe the screen and find and tap **Wi-Fi**. Turn it on.
3. Tap icon  to return to preview screen.
4. Using the Wi-Fi function of your smart phone, search for the camcorder ID “hp_i885w_xxxx” from the list (last 4 numbers are system random numbers). Enter default password **12345678**.



5. Open app Go Moto Plus, the screen will display “Network Streaming”, it indicates your connection has been successfully established.

Note:


1. The smart phone shall be within a maximum of a 5m distance from the camcorder without any buildings in between.
2. When the Wi-Fi function of the camcorder is ON but not yet connected with your smart phone, or the connection is disconnected, the Wi-Fi icon on camcorder's screen will be white.
3. After connecting the smart phone with the camcorder, and activate app feature “Network Streaming”, all the button operation of the camcorder will be disable; all the operations shall be carried out via the Go Moto Plus App.
4. The language of the Go Moto Plus app will be consistent with your smart phone, beyond the language options, the app will be activated with default language.
5. Supports OS: Android 9.0 or higher, iOS 13 or higher, Harmony 2 or higher.

4.3 Use Go Moto Plus app

Tap [Go Moto Plus] icon  to activate the application. The main screen will pop up. Follow the below instruction to operate this application.



4.3.1 Main Screen

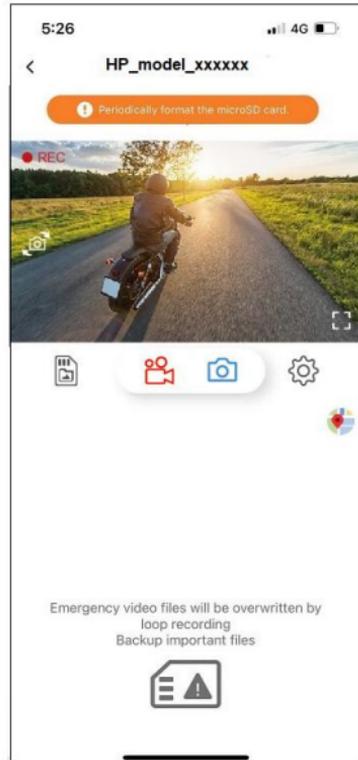

icon	Description
 / 	Go Moto Plus logo / SD card message

	Preview screen
	Switch front and rear camera preview image
	Full screen display
	Start/Stop recording
	Take snapshot
	Camera File (check the files in microSD)
	Camera Setting
<p data-bbox="120 797 399 848">Emergency video files will be overwritten by loop recording Backup important files</p> 	<p data-bbox="451 765 871 947">To remind the emergency files in the microSD card is about to be full and going to over write the oldest files. Backup the files and clear up the emergency folder, and this message will be gone.</p>
	Map

NOTE:

1. The camcorder will synchronize date/time with smart phone once open the app.
2. App's interface or feature may differ from app versions. Please refer to the latest version downloaded from Google Play Store or iOS App Store.
3. Android phone please download "Google Offline Map" in advance. Follow the steps: Update or download the latest version of Google Map → open Google Map app → Tap the User Portrait icon on the top → Tap "Offline Maps" → Tap "SELECT YOUR OWN MAP" → Select the area that you want to download → Tap "DOWNLOAD".

4.3.2 Playback, delete, download

You can use this feature to playback or delete the file saved in camcorder, or to download the file from camcorder to your mobile device.



1. Tap the icon [Camera File], the camcorder will stop recording.
2. The files saved in the camcorder will be displayed on your smart phone. There are Loop and Locked two folders. The thumbnail image corner will show F or R, which means shooting by front cam or rear cam. Tap the image and it will start to playback.



3. Tap the right top corner “Select” and pick up the files that you want to delete or download, and tap the icon in the screen bottom to execute.



icon	Description
	Download the file to “Local Album”. The downloaded file can be playback without connecting with the camcorder.
	Video Screenshot.

	Delete the file in microSD card.
	Downloaded file will show "Downloaded" in thumbnail image.

Note:

1. If you find the video playback without audio, please check if you turn on Voice Record on the Setting. If you do turn it on, it means the smart phone itself doesn't support the video decoding. It's not the problem of the file. We recommend you to install a free app software such as VLC to playback the file.
2. Deleted files cannot be recovered. Ensure the files have been backed-up before deletion.
3. More files to be read or downloaded, you are recommended to take out microSD card from camcorder and use computer.

4.3.3 Camera Setting


You can use this feature to set up most of your car camcorder options.

1. Tap icon  [Camera Setting].
2. Refer to the below table for details of menu items and available menu options.


4.4 Album

You can use this feature to playback or delete the file that you download in your smart phone. The files in the Album can be reviewed without connecting with camcorder.

1. Tap icon  [Album]. (It will stop recording if the camcorder is connected.)

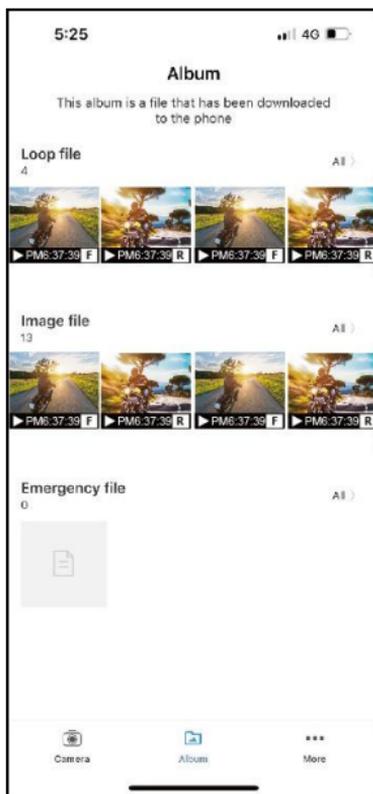

2. Pick up the file that you want to playback, delete or edit.

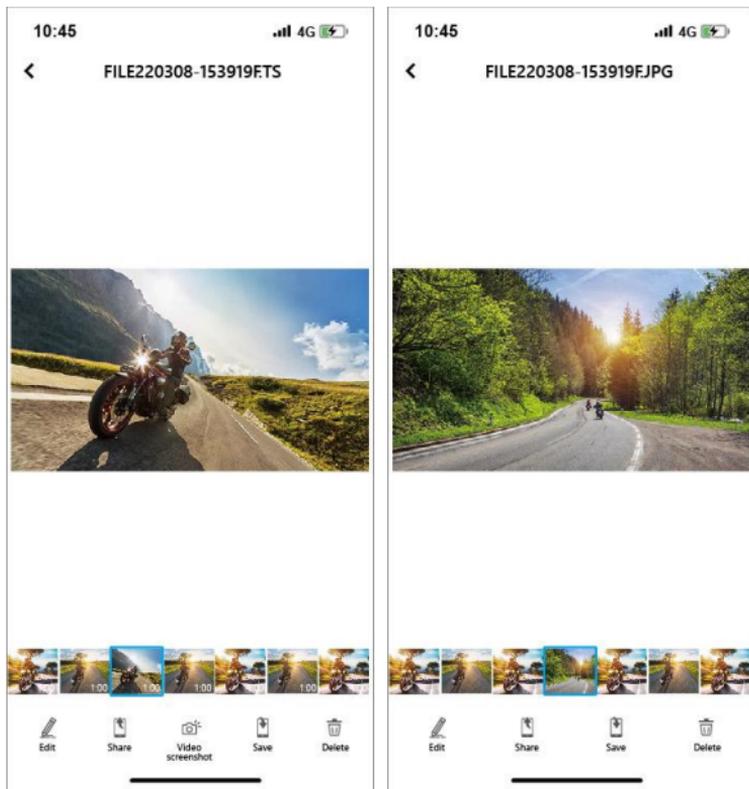

Icon	Description
	Edit video or snapshot.
	Share the file to social media.
	Video Screenshot. The file will be saved in "Album".

	Save the file to smart phone's album. When the file saving is done, screen message will show "Save to smartphone's album successfully", and the smart phone's album will create a new folder named "Go Moto Plus".
	Delete the file in the App's Album. The file in the camcorder still exists.

Note:

1. Deleted files cannot be recovered. Ensure the files have been back-up before deletion.
2. If you find the downloaded files unable to playback or without audio, which means the smart phone itself does not support the video decoding. It's not the problem of the file. We recommend you to install one free App software such as VLC to playback the file.

5 Adjust the Settings

In the recording screen, tap icon  to enter Menu setting.

Followings is available menu options.

Menu	Description	Available option
Satellite status ^(note)	GPS reception status	
Wi-Fi	Turn on/off Wi-Fi	On / Off
Speed Unit ^(note)	Set the speed unit	KM/H / MPH
Car Speed Watermark ^(note)	Set car speed watermark on image	On / Off
Time Stamp	Set date, time, brand, model, car speed, location on footage	On / Off
Speed Cam Alert ^(note)	To activate Speed Cam Alert function	On / Off
Speed Position Management ^(note)	Delete manual add speed cam position	Delete last position/ Delete all position
Speed Limit Alert ^(note)	Set speed limit alert	Off / 50~200km/h (30~125 mph)
GPS Broadcast ^(note)	To activate GPS speech function	On/ Off
Set Time Zone ^(note)	Set time zone	GMT-12 ~ GMT +12
Date / Time	Set up date and time	
Language	Set the on-screen display menu language	According to ship to area
Resolution	Setting of video resolution	2560x1440 30fps HDR 1920x1080 60fps HDR 1920x1080 30fps HDR
Front Cam EV Setting	Set Explore Value of front camera	+3 ~ -3
Interior Cam EV Setting	Set Explore Value of interior camera	+3 ~ -3
Rear Cam EV Setting	Set Explore Value of rear camera	+3 ~ -3
LCD Setting	Set LCD off time. Camcorder screen will be off after a set time if no operation is detected. Touch the screen or press power button will switch it on. *Recording is not affected when screen is off.	On / 7sec off / 1min off / HUD

Menu	Description	Available option
LCD Brightness Setting	Set LCD screen brightness	Manual / Auto
Voice Record	Setting for voice record in the video.	On / Off
Keystone	Set tapping sound	On / Off
Volume	Adjust sound volume	1 ~ 10
Record Interval	Set the recording duration for each recorded video file	1 min / 3 min
Parking Mode	To keep recording after engine turns off. *This feature needs to install ACC cable in advance.	Off / Park Recording / Timelapse / Collision Detection
Collision Detection	The camcorder will automatically trigger emergency recording when tremor of a collision is detected. The sensitivity level can be adjusted.	Off / Low / Middle / High
Driver Fatigue Alert	If the driver fatigue reminder is enabled, the device will emit a warning sound and display a warning message after the system has been powered on for 1 hour. The warning will repeat every 30 minutes thereafter.	On / Off
Anti-flicker	Reduce flicker on LCD	60Hz / 50Hz
Format	Format memory card.	Yes / No
Default	Reset the camcorder to the initial factory default settings.	Yes / No
Firmware Version	Showing firmware version	

Note: GPS related function has to install optional GPS accessory in advance.

6 Specifications

Item	Description
Image Sensor	5MP SONY Starvis sensor
Effective Pixels	2592 (H) x 1922 (V)
Storage Media	Supports microSD V30 speed or greater, and capacity 16GB and higher.
LCD Display	11.26" touch screen
Lens	Wide Angle Fixed Focus lens
Focus Range	1.5m~Infinity
Video Resolution	Front camera: 2560 x 1440 HDR 1920 x 1080 HDR Rear camera(option): 1920 x 1080 HDR Interior camera(option) 1920 x 1080
Video Format	.mp4
G-Sensor	3-Axis G-Force sensor
GPS	External GPS, Optional
Wi-Fi	Built-in
Microphone	Built-in
Speaker	Built-in
Interface	USB-C
Power Source	Built-in super capacitor
Operating Temperature	0° ~ 45° C

Item	Description
Operating Humidity	20 ~ 70% RH
Storage Temperature	-20° ~ 70° C
Support Operation System	Android 9.0 or higher iOS 13 or higher Harmony 2 or higher
Dimensions	311 x 74 x 42 mm
Weight	Approx. 434g (not include memory card)