



**MUFU**

More Unique For YoU

---

**V40T**

**Moto Cam**

**User Manual**

Thank you for purchase MUFU moto cam. This product is specifically designed to record real time video when riding a scooter or motorcycle.

The content in this document is for informational purpose only and is subject to change without prior notice. We have made every effort to ensure that this User Manual is accurate and complete, however, no liability is assumed for any errors or omissions.

The manufacturer reserves the right to change the technical specifications or accessories without prior notice.

Please visit official website for the latest version of user manual.

## **Notice**

- ❖ Please peel off the protective film from the camera lens before use.
- ❖ Do not touch the lens with your fingers. Finger grease may be left on the lens, resulting in unclear videos or pictures. Inspect and clean the lens with a soft, non-abrasive cloth regularly.
- ❖ Please charge the unit to full before first use using the provided USB Type-C cable. Please do not use another brand of charging cable to avoid a potential equipment malfunction. The red LED on the camera will illuminate when charging, and green LED will illuminate when reaching full charge.







\*Charging adapter can use 5V, 2A and higher, USB Type-A port.

- ❖ If the unit will not be used for an extended period of time, please charge at least once every 6 months to maintain the battery's health and avoid low-voltage related damage.
- ❖ **Before charging or inserting a memory card, please clean and dry the USB port and SD card slot on the device. Make sure there are no water droplets or moisture remaining to prevent damage to the device.**
- ❖ Please download MUFU Video app from iOS app store or Google Play Store before use. The Wi-Fi password is **12345678**.
- ❖ By default, Wi-Fi is ON for 3 minutes when the camera is powered on. If it doesn't connect to the MUFU Video app within 3 minutes, the camera will disable Wi-Fi automatically to save power. To turn on again Wi-Fi, simply power the camera OFF then ON again.  
**NOTE: An active Wi-Fi connection and battery life will affect recording time.**
- ❖ When the main unit connects USB cable for charging, the main unit will power on automatically and turn on Wi-Fi. It's workable to connect app for setting camera or checking recorded files. Idle for 3 minutes, the main unit will power off automatically. Unplug and plug the USB cable once again to re-start the main unit.
- ❖ Recommend to use microSD card V30 or higher and capacity 16GB or higher (up to 128GB).


- ❖ Format microSD card regularly and synchronize date/time. (Recommended: Once per month.)
- ❖ **In a high humidity environment or when travelling between areas with a large temperature difference, light moisture or fog may appear on the lens. This is normal. If this happens, remove the microSD card, and remain the microSD card slot cover and USB cover opening for several hours until the internal moisture or fog evaporates, and then reinsert the card and resume use.**
- ❖ The friction scratches caused by the regular buckle of the main unit mount are normal and do not affect the use. Due to the production test, the main unit mount will have some micro-friction scratches. This is normal.
- ❖ To avoid the product damage or accidents from product dropping, install the product properly and solid before take a ride.
- ❖ Due to the various specifications of memory cards on the market, and the quality is uneven, we do not guarantee that all memory cards are compatible with our products. If there is a memory card abnormality, resulting in the inability to store recorded images, It's not directly related with the dashcam. Please swap the new card from where you purchased.
- ❖ The warranty doesn't cover damages resulting from alteration, adjustment or repair by unauthorized person.

## 1. What's Inside

The package contains the following items. If any items are missing or damaged, please contact the original place of purchase immediately.




Camera (Main Unit)	Main Unit Mount	USB Cable (type C)
		
Carry-on Power Key	Memory Card	Warranty & Initial Use
		

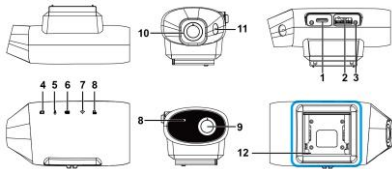


## 2. Product Overview



No	Description
1	USB-C port
2	microSD slot
3	Reset
4	microSD Indicator
5	Microphone Indicator
6	Battery Indicator
7	Wi-Fi Indicator
8	Recording Indicator
9	Front Camera
10	Rear Camera
11	Microphone
12	Bracket Socket

### 3. LED Indicator

LED Indicator		Status	
	microSD	Red, solid	No card / card error
		Off	Card is in use.
	Microphone (Voice Record)	Red, solid	Disable voice recording
		Off	Voice recording
	Battery/ Charging	Red, solid	Charging
		Green, solid	Full charged
		Orange, flash	Low battery

LED Indicator		Status	
	Wi-Fi	Red, solid	Disable Wi-Fi
		Off	Wi-Fi on
	Video Record	Blue, solid	Not recording
		Blue, flash	Video recording
		Blue, rapid flash	Emergency recording
		Off	Stealth Mode
	USB mode	Red, solid	Connect computer to read memory card (w/o main unit mount)

Note: Before first use, use the supplied USB type-C charging cable to fully charge the camera.


## 4. Beep Sound

Beep Sound	Description
Beep-Beep-Beep	Power on and start recording
Beep~ (continuous 2 seconds)	No card or card error
Beep~ (continuous 2 seconds) and Beep-Beep-Beep	Low battery (about 10 minutes to power off)
Beep-Beep	<ul style="list-style-type: none"><li>- Power off because of low battery</li><li>- Power off when the main unit is apart from the mount.</li><li>- Secret Recording Function is activated.</li></ul>




## 5. Insert microSD Card

Insert the microSD memory card with the pins facing forward. Once the memory card locks into place, replace the slot cover securely over the slot.

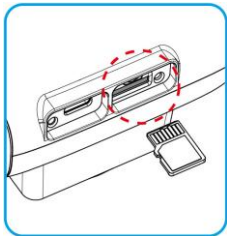

The slot cover must be tightly sealed to prevent moisture from entering, causing the lens to fog. Insert the left edge of the slot cover, and then press the right edge of the slot cover to create a good seal. See below.

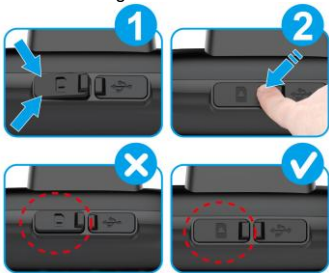

## 6. Download the App

When using the camera for the first time, use your smartphone to download and install the **MUFU Video** app.

Scan the QR code or search “MUFU Video” in the iOS App Store or Google Play Store.



iOS



Android

App layout and features may be changed subject to different software versions.  
Please refer to the Google Play Store or iOS App Store for the latest version.

## 7. Power On and Off

Following is the way to power on/off the camera.

### ① Buckle Detection

Buckle the camera into the main unit mount, the camera will automatically power on and start recording. Remove the camera from the main unit mount, the camera will power off automatically.

### ② Vibration Detection

When pick up the helmet with camera and the main mount buckled, the camera will automatically power on and start recording. If the helmet idles for 3 minutes, the camera will power off automatically. This is for the rider's convenience to store the helmet in the cabinet without taking out camera.

**Note:** This function is activated on the premise that the camera is buckled

with the main unit mount, and "Vibration Detection to turn on/off the device" on app's [Camera Setting] is turned on.

**Note:** If Secret Record Function is activated, this feature will be disabled automatically.

### 3 Charging

When the camera is charging, the camera will power on and Wi-Fi will be turned on, too. Connect app for camera setting or files review. Camera will power off if app is not connected and used in 3 minutes.

**Note:** Main unit is apart from main unit mount.

**Note:** Main unit won't record when charging.

4 The carry-on power key is for home use when the device leaves main mount on the helmet.



**Note:**

When the camera is buckled into the main unit mount, it will automatically power on and start recording, indicated by a slow-flashing Blue LED light. The recording file will be saved onto the microSD card. When the card reaches capacity, the loop recording function will overwrite the oldest file to make room for new files and continue recording. If the Blue LED is not flashing, check if the memory card is inserted. If the card is existed, try to format the card or change a new card.

## 8. Wi-Fi Connection

When the camera's Wi-Fi is turned on, using your smartphone, search nearby Wi-Fi networks for MUFU\_V40T\_XXXX and tap to connect. Enter password **12345678** to connect to and control the camera. Followings are ways of turning on Wi-Fi.

- ① When secured into the main unit mount, the camera and its Wi-Fi will automatically power on. If the camera doesn't connect with the MUFU Video app within 3 minutes, Wi-Fi will be disabled automatically to preserve battery life. If you want to turn on Wi-Fi once again, simply remove the camera from the mount, wait for all indicator lights to turn off, and buckle it in once again to power on the camera and reactivate the Wi-Fi.
- ② When the camera takes out main unit mount and charges with USB-C cable, it will turn on Wi-Fi and enable to use app. The camera will not record in charging mode. The camera will power off if the app is not in use for 3

minutes.

**Note:**

1. Your smartphone must be within a maximum 5-meter distance from the camera with no buildings in between.
2. The language of the app will be consistent with your smartphone. Beyond the language options, the app will be activated with the default language.
3. Once the camera is connected with computer, it will enter USB mode. It's able to read and download the files from the camera. In this mode, camera won't turn on Wi-Fi.



## 9. Install & Uninstall

### 9.1 Install

① After inserting the card into the device, buckle the device onto its mount. All LED indicators will light up for three seconds and then turn off. Following this, the status indicators (such as the recording or Wi-Fi LED) will turn on.



② Put ① buckled camera and mount on the right side of helmet. Temporarily fix it in order to adjust the best view angle.



③ Make sure your phone is connected with MUFU\_V40T\_xxxx via Wi-Fi, and open the MUFU Video app to check preview image. Move right or left, forward or backward the mount to obtain the best recording image angle.



④ After the recording angle is confirmed, pull down the camera and the main unit mount from helmet. And take the camera and main unit mount apart.

5 Wipe the newly confirmed helmet sticking area, and after its surface dries, peel off the protective plastic sheet from the adhesive pad on the main unit mount, stick and press the main unit mount to the helmet. Wait for 12 hours for firmly fixing. And then buckle the camera on the main unit mount and start using.




## 9.2 Uninstall

Press the lock on right side of the main unit mount, push the camera to left side to remove it.



## 10. Calibrate and Format

After adjusting your viewing angle, tap  in the MUFU Video app to enter [Camera Setting]. On first use, be sure to calibrate the “Tilt Sensor” and “Format” the microSD card.

### 1 Calibrate the Tilt Sensor

Hold your motorcycle upright, straight, and as still as possible. The camera buckles on the main unit mount at the helmet. Put the helmet on your head and sit down on the motorcycle. Then, tap on “**Tilt Sensor**” in the menu so the camera can calibrate the internal tilt sensor. After calibration is completed, tap “**Emergency Recording**” in the menu and turn it on. Afterward, if the camera detects that the motorcycle is toppled over, it will trigger emergency recording automatically. This is indicated by the green LED going from a slow flash to a rapid flash. Emergency recordings are stored in the emergency video folder. When the folder reaches capacity, app will remind with

“Emergency video files will be overwritten by loop recording. Backup important files.” Please check and backup emergency files regularly.

## **2 Format microSD card**

Tap “Format” in the menu to format microSD card. It is recommended to format your card at least once a month to ensure that it is working properly. Backup important files before format SD card.

### **Note:**

1. DO NOT remove or insert memory card when the camera is in power-on status. This may cause memory card damage or data loss.
2. Memory cards have a service life. Long-term use may lead to write speed degradation and file save failure. If this happens, it is recommended that you purchase a new memory card.
3. “Emergency Recording” can be enabled or disabled from app. The emergency folder is occupied 20% capacity of memory card. Even this function is disabled, the space is still reserved.

## 11. Secret Record Function

Open the MUFU Video app and enable the Secret Recording Function in the settings menu. Once activated, the device will emit beep-beep two sounds, and all LED indicators and alert sounds will turn off. Secret recording will begin, and the **vibration detection power on/off** function will be disabled during this mode.



When the device is restarted, the Secret Recording Function will automatically turn off.


LED indicators, alert sounds, and the **vibration detection power on/off** function will return to normal operation.



## 12. Change Password

To change the Wi-Fi password, follow the steps below. If leave it unchanged, the default password is **12345678**.

- 1 Open MUFU Video app , and tap  to enter [Camera Setting], Next, tap [Wi-Fi Password Setting].
  - Enter your new password.
  - Enter your new password again to confirm.
  - Tap “OK”, and screen will show message of “The camera needs to be reconnected after completion, please confirm the change?”. Tap “OK”.
  - It will automatically lead to previous page. The screen will show “Please ignore the network named MUFU\_V40T\_XXXXXX in the [Settings-Wi-Fi]

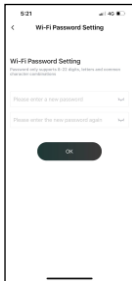

option of the iPhone, and then enter the new password to rejoin.”

→ Close app, and follow by step ② to re-connect Wi-Fi.

② iPhone users: Open the Wi-Fi connection menu and tap the icon ⓘ by side of MUFU\_V40T\_xxxxxx network. Next, tap “Forget This Network” and confirm your decision.

**\*Note:** Android phone user can skip this step.

③ Next, tap the V40T network again to re-enter your new password and reconnect your smartphone to the MUFU Video.





**Note:** Be sure to remember your new password. If you forget your new password, a factory reset will be necessary.









## 13. App Operation

### 1 Main Screen



icon	Description
	MUFU logo / microSD card message
	Preview image
	Switch front and rear preview image
	Full screen preview

	Start / Stop recording
	Take snapshot
	Camera Files (review recorded files in V40T's microSD)
	Camera Setting

<p>Main unit power</p> 	<p>Note: the remaining battery</p>
<p>Emergency video files will be overwritten by loop recording Backup important files</p> 	<p>Note: The emergency videos folder in microSD reaches capacity, and will be overwritten by new recordings. Please back up important files. This message icon will eliminate after backup.</p>


**Note:**

1. The MUFU Video App will auto sync the camera's date/time with your smartphone.
2. App layout and features are subject to change, depending on the software version. Refer to the Google Play Store or iOS App Store for the latest updates.
3. If recordings have no audio, check if Audio Recording (microphone) setting is OFF in the menu. For video playback, we recommend VLC Media Player.
4. Deleted files cannot be recovered. Backup any important files before deleting them.


5. The snapshot is activated by app. The image file will be stored both in microSD card in the camera and “Album” folder of MUFU Video app. The file will be marked as “Downloaded” on preview thumbnail.
6. If you plan to download a large number of videos and photos, we recommend connecting directly to a PC/Mac via USB Type-C cable.


## 2 Album







The files downloaded from  will be saved in this album in the App. The files can be opened and reviewed without Wi-Fi connection to the camera.



1. Tap the icon  [Album] below the home page. The camera will stop recording if it's connected with app.
2. Tap the file from preview thumbnail to playback, delete or edit.


Icon	Description
	Edit the video or photo. -Video: remove or change background music -Photo: crop or use filter for photo



	<p>Share the video or photo to social media.</p>
	<p>Video screenshot.</p>
	<p>Save the video or photo to smartphone's album. When the file is saved, the screen will show a message of "Save to smartphone's album successfully." and smartphone's album will automatically create a folder named "MUFU Video".</p>
	<p>Delete the file downloaded in App's Album. The file in the microSD card in the camera is still existed.</p>

### 3 Camera Setting

Use this feature to set up your preferred options.

1. Tap icon  [Camera Setting] on main screen. The camera will stop recording.
2. See available settings below and adjust to your preferred options.

Menu	Description	Options
Vibration Detection to Power On/Off	When pick up the helmet with camera mounted, the camera will automatically power on and start recording. If the helmet idles for 3 minutes, the camera will power off automatically. *The camera must be mounted with the mount.	On / Off

Audio Recording (microphone)	Enable/Disable audio recording.	On / Off
Recording Interval	Set the length of each individual recording.	1min / 3min
Tilt Sensor	Calibrate the Tilt-Sensor for topple-over detection.	Yes / No
Emergency Recording	Enable/Disable emergency recording function. *The emergency recording folder is occupied 20% of memory card. Even it turns off, this capacity is still occupied.	On / Off
Format	Format the memory card in the camera. This will delete all contents permanently.	Yes / No

Wi-Fi Turn-on Time	Set the Wi-Fi activation duration. *Active Wi-Fi will decrease total recording hours	Always on / 3min off
Watermark	Watermark includes brand, model and date/time.	On / Off
Resolution	Set the video resolution.	2K WDR 1080p WDR
Front Cam EV Setting	Set the Exposure Value of front camera.	+3 ~ -3
Rear Cam EV Setting	Set the Exposure Value of rear camera.	+3 ~ -3
Secret Recording Function	To enable the secret recording function, all LED and alerts sound will be turned off. *the vibration detection to power on/off will be disabled during this mode.	On / Off
Wi-Fi	Change the Wi-Fi password.	

Password	(Default: 12345678)	
Default Settings	Reset the camera to factory default settings.	Yes / No
Firmware Version	Indicates the current firmware version of the camera.	
Note: If the displayed menus or options differ from those shown in the app, please refer to the latest version of the app for accurate information.		

## 13. Specifications

Item	Description
Image Sensor	5MP CMOS sensor
Effective Pixels	2960 (H) x 1666 (V)
Storage Media	Suggest class V30 or higher microSD card, up to 128GB
Lens	Wide angle fixed focus waterproof lens Aperture : F/1.7
Video File	Resolution : 2K WDR or 1080P WDR
	Format : MP4
Picture File	Use App to take snapshot

	Format : JPG
G-sensor	3-Axles G-Force sensor
GPS	N/A
Wi-Fi	Built-in
Microphone	Built-in
Battery	4000mAh
Charging Temperature	0° ~ 40° C
Operating Temperature	0° ~ 60° C

Operating Humidity	20 ~ 70% RH
Storage Temperature	-20° ~ 70° C
App Supports OS	Android 9.0 and higher, iOS 13 and higher, Harmony 2 and higher
Size	93.3 x 49.6 x 41.2 mm
Weight	Approximately 128g



## Prohibition of co-location

This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

## WEEE Notice

### Disposal of Waste Electrical and Electronic Equipment and/or Battery by users in private households in the European Union



WEEE



Battery

This symbol on the product or on the packaging indicates that this cannot be disposed of as a household waste. You must dispose of your waste equipment and/or battery by handing it over to the applicable take-back scheme for the recycling of electrical and electronic equipment and/or battery. For more information about recycling of this equipment and/or battery, please contact your city office, the shop where you purchased the equipment or your household waste disposal service. The recycling of materials will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Contains FCC ID: 2ACFI67XWM

### **RF Exposure Compliance**

Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. To maintain compliance with FCC exposure compliance requirements, please follow the operating instructions as documented in this manual.

### **Regulatory & Safety Notice**

- ❖ This document provides country- and region-specific non-wireless and wireless regulatory notices and compliance information for your product. Some of these notices

may not apply to your product.

- ❖ Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- ❖ Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- ❖ Due to local laws and for your own safety, DO NOT operate the camera while riding.
- ❖ Use MUFU Video to app to synchronize your date and time before first use.
- ❖ The firmware function in the camera is for reference only, riders are advised to exercise discretion based on actual road conditions.
- ❖ This product is intended only for non-commercial use, within the maximum limits permitted by law. We take no responsibility for any losses as a result of use of this product.
- ❖ Wi-Fi Signals are unable to pass through the building. The max limit of signal transmission is 5 meters.
- ❖ Wi-Fi Operation Channel: Ch1~Ch13(2.4GHz)
- ❖ The product employs wireless data communication which may interfere, or be interfered by, a near-by camera.

- ❖ Never use this camera in the vicinity of a microwave oven or at places where there is radio interference.
- ❖ Radio wave reception may be worsened in specific environments.
- ❖ Please be advised that if another camera is also using the same 2.4GHz/5GHz band as this product, the processing speed of both cameras may slow down.
- ❖ The camera may get warm during use. This is normal.
- ❖ Improper use or operation of the product may result in damage to the camera or its accessories and void the warranty.
- ❖ This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.
- ❖ The radio frequency (RF) generated by this RF electronic camcorder may cause adverse effects on the operation of other electronic camcorders and result in malfunctioning. Wireless transmitters and circuitry may also interfere with other electronic camcorders. Therefore, do observe the following precautions:
  - Aircraft: Never use a radio transmitter when you are in an airplane. Please switch off the Wi-Fi function of the camcorder.

- Vehicle: The radio frequency transmitted by this camcorder may affect the electronic system in a motorized vehicle. Please consult the manufacturer or dealer of your vehicle on the possible effect.
- Pacemaker: In order to prevent any potential interference to a pacemaker, anyone who uses a pacemaker should be advised, that, when using this camcorder, a minimum distance of 15cm (6 inch) should be kept between the camcorder and the pacemaker; and never put this camcorder in a chest pocket. In case of any doubt of interference, switch off the camcorder immediately.
- Medical Camcorder: If you use a personal medical camcorder, consult the camcorder manufacturer or your physician to confirm if your camcorder is sufficiently shielded from the RF transmission of this camcorder.
- Medical Facilities: Hospitals and medical institutes may use facilities that are sensitive to an external RF energy. Observe such instructions when the medical care personnel or any posted sign requests you to switch off any camcorder that may interfere the radio frequency.
- Explosion sites or any location with a posted sign: In order to prevent interfering with an explosion activity, observe all the signage and instructions in the Explosion Area or in a zone with a "Switch Off 2-way Radios" sign by switching off camcorders that may interfere with the radio frequency.

- ❖ MUFU is NOT responsible for the loss of any data/content during operation.

**By using the product, it is assumed that you agree to all of the above statements.**